
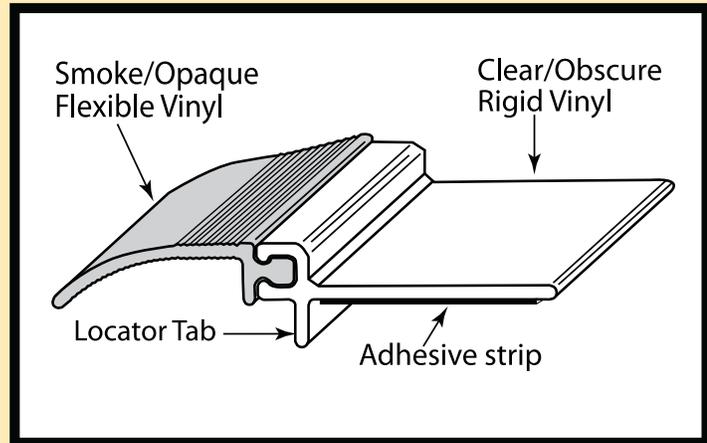


Toilet Partition Replacement Hardware

"Privacy Cover" PATENT PENDING

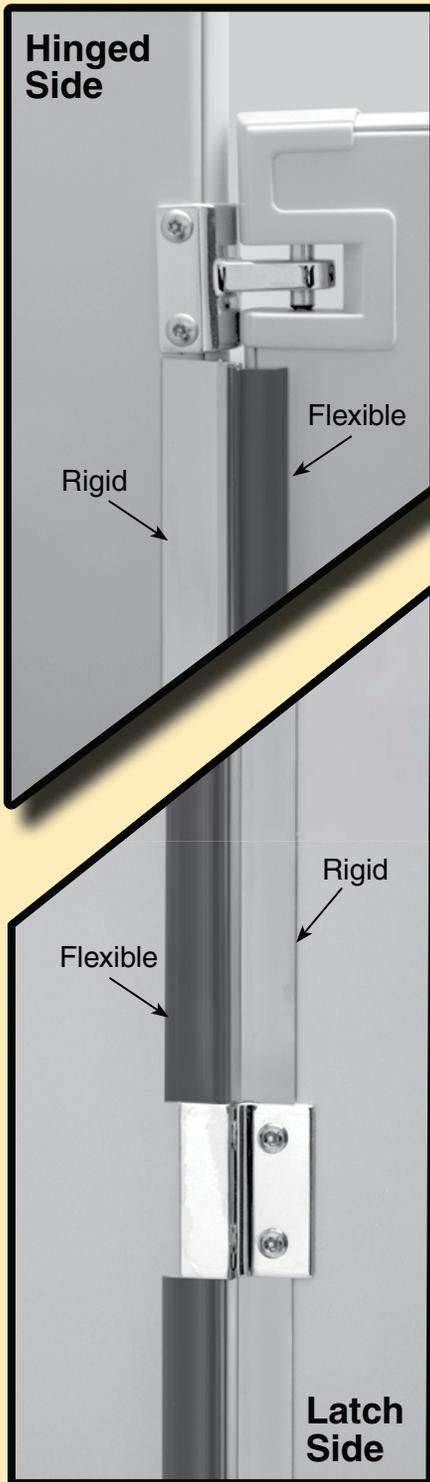

(2) 58" pieces per set (poly bagged) / 5 sets per carton


Features:

- Eliminates most door and panel gaps.
- Assures personal privacy.
- Self-adhesive for fastener free installation.
- Clear rigid vinyl blends to all partition colors and materials.
- Cut to fit for various partition door installations. (See back for suggestions)
- Flexible vinyl flap adapts to multiple applications. The smoke / opaque color and serrated surface obscures vision.

Tools Required:



Various Cutting Tool Options

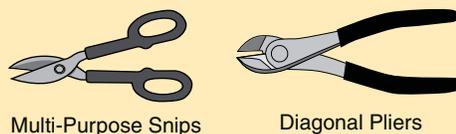

Made in the USA

For more information, please contact your favorite distributor for:
• Jan / San • Plumbing • Toilet Partition • Restaurant Supply
and reference this web site

INSTALLATION INSTRUCTIONS

FOR PRIVACY COVER PATENT PENDING

For Door Gap Applications: (**Apply to Post only.**)

A) Latch Side:



Measure from top of door to top of strike / keeper, then measure from bottom of strike / keeper to bottom of door.

Pre-Cut the "Privacy Cover" with either (*Multi-Purpose Snips, Diagonal Pliers or other safe cutting device*) to the above measurements and align the cover to the post. Clean up the rough edges with a utility knife or fine grade sandpaper if necessary.

Always place the cover on the side opposite to the direction of the door opening.

Clean surface of post, where the "Privacy Cover" is to be mounted, with (*isopropyl*) rubbing alcohol. Do Not Use Household Cleaners.

Remove adhesive backing from flat surface of the cover. Use Locator Tab to assist in placement. Press firmly to the post and apply pressure, using an up and down motion to set the adhesive.

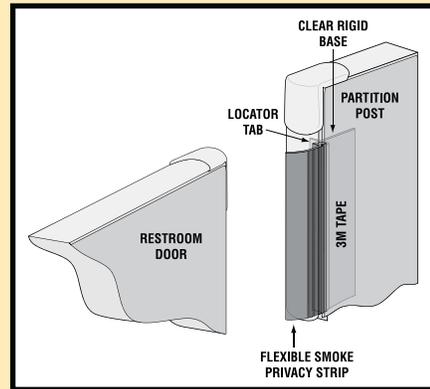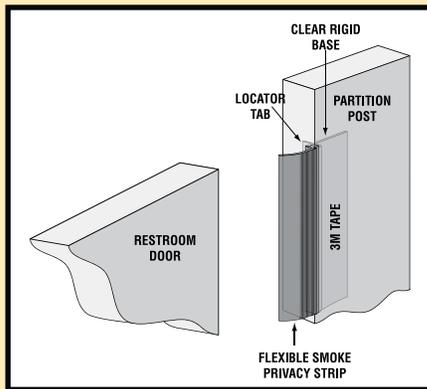

B) Hinge Side:

Toilet partition doors may be hinged with different style hinges, installation will vary slightly, but cover will always be placed on the post side opposite to the direction of door opening.



Hinge Styles



Pivot Hinge:

Measure from top of door to top of top hinge, and then measure from bottom of the top hinge to top of bottom hinge. Usually it will not be necessary to place "Privacy Cover" below the bottom hinge.

Surface Hinge:

Measure door from top to the bottom. Hold "Privacy Cover" to post and determine if adhesive surface will make contact with the hinge fastener heads. If this condition exists, merely cut out a wedge of material at the point of contact with the fastener heads to allow the cover to make an unhindered flat contact to the post.

Use the same cutting, prepping and application directions as indicated under "Latch Side".